



Omni-Directional Installation Instruction

Installation Steps:

- Mounting kit can accommodate pipes 1"-2.5" (25.4mm-63.5mm) in diameter
- Mount the antenna to the plate first using the supplied hardware
- When mounting antenna upside-down a drain hole will need to be drilled into the cap
- **DO NOT** mount models OD7-1350, OD8-1675, OD6-2600, OD9-2600 upside down
- **OPTIONAL:** It is recommended that proper lightning protection be used for all outdoor applications.
- Lightning Arrestor (CPG-0NINF)
- **ATTENTION:** Always wear safety glasses and follow the proper safety practices when installing this antenna
- **Model OD3-600/6000:** It is recommended to have the fiberglass around 1.25" (31.8mm) away from the bracket

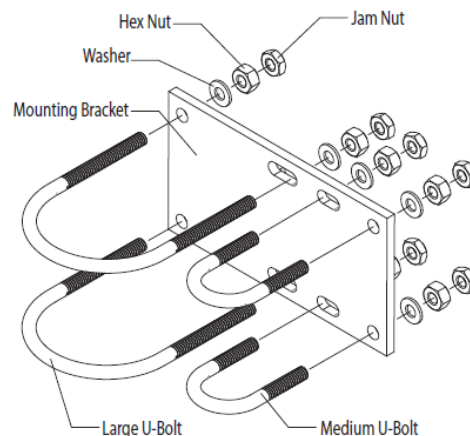


Shown: Mounting Kit and Hardware

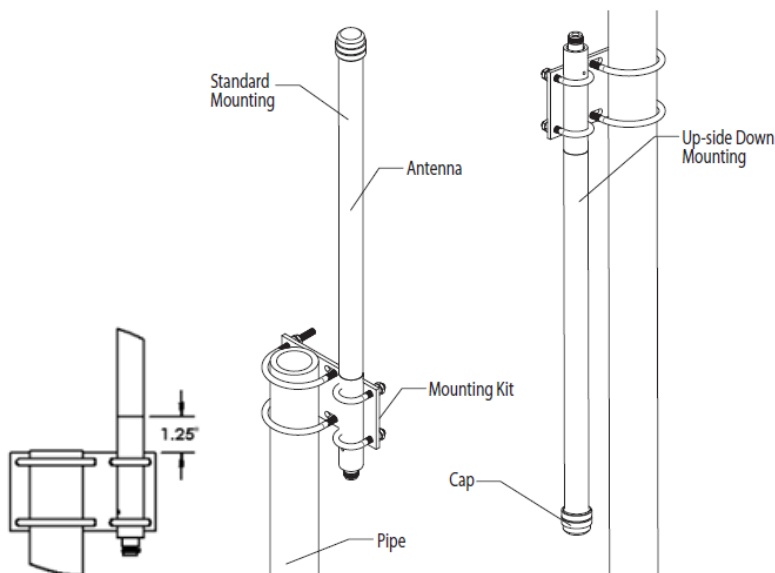

CAUTION:

TO PREVENT DAMAGE TO THE ANTENNA, ALIGN AND PUSH THE N CONNECTOR STRAIGHT ONTO THE ANTENNA, THEN TIGHTEN USING THE N PLUG COUPLING NUT FROM THE CABLE SIDE. NEVER ROTATE THE ANTENNA.

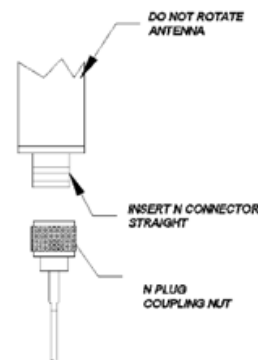

Terms and Conditions



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-017-9-001-0114/DR: SM/APP: XX/REV: F